


Steering Wheel Replacement

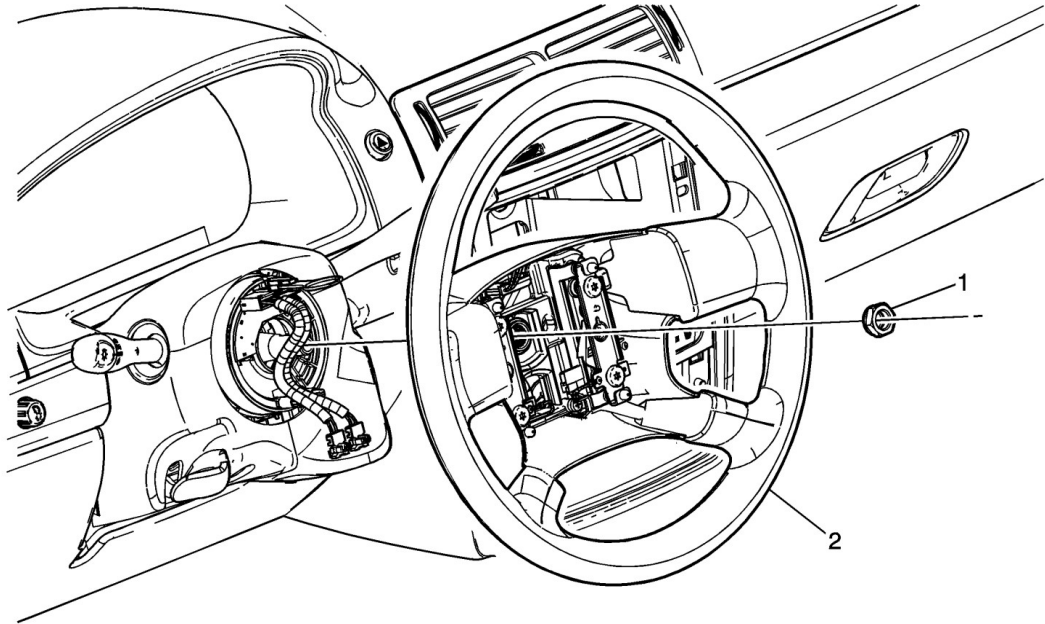

Steering Wheel Replacement

Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable the SIR system. Refer to SIR Identification Views. 2. Remove the steering wheel SIR module. Refer to Airbag Steering Wheel Module Replacement. 	
1	<p>Steering Wheel Nut Notice: Refer to Fastener Notice. Tighten 40 N•m (30 lb ft)</p>
2	<p>Steering Wheel Tip:</p> <ul style="list-style-type: none"> • Use J 1859-A Steering Wheel Puller and J 36541-A Steering Wheel Puller Legs to remove the steering wheel. • Ensure the adapter legs face AWAY from the center hub of the wheel. • If needed, use a screwdriver or other suitable tool to shim the gap between the steering wheel hub and the adapter legs. Ensure the legs are perpendicular to the wheel.