
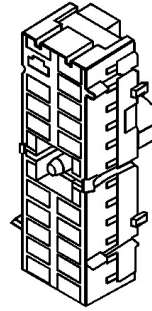


## Body Control Module (BCM) C3

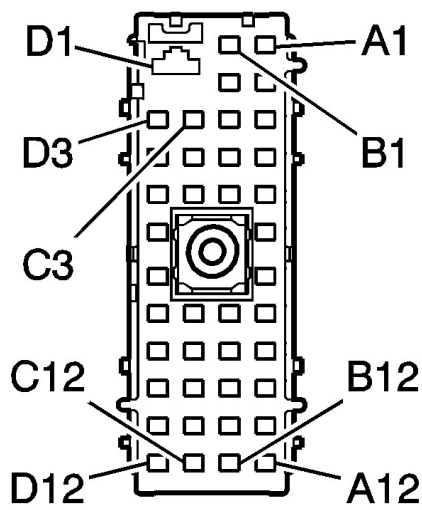

### Connector Part Information

- OEM: 15404825
- Service: 15404825
- Description: 41-Way F Metri-Pack 280, 800 Series (RD)

### Terminal Part Information

- Terminal/Tray: See Terminal Repair Kit
- Core/Insulation Crimp: See Terminal Repair Kit
- Release Tool/Test Probe: See Terminal Repair Kit

### Body Control Module (BCM) C3

Pin	Wire Color	Circuit No.	Function
A1	TN	294	Door Lock Actuator Unlock Control (AU3)
A2	TN	294	Door Lock Actuator Unlock Control (AU3)
	TN	294	Door Lock Actuator Unlock Control (AU3) (Sedan)
A3	D-BU/WH	149	Courtesy Lamp Supply Voltage
A4	GY	295	Door Lock Actuator Lock Control (AU3) (Driver)
	GY	295	Door Lock Actuator Lock Control (AU3) (Passenger)

Pin	Wire Color	Circuit No.	Function
A5	GY	295	Door Lock Actuator Lock Control (AU3)
	GY	295	Door Lock Actuator Lock Control (AU3) (Sedan)
A6	—	—	Not Used
A7	BN	9	Park Lamp Supply Voltage
A8	PK	339	Run/Crank Ignition 1 Voltage (UQ3)
A9	YE	18	Left Rear Stop/Turn Lamp Supply Voltage
A10	GY	157	Courtesy Lamp Control
A11	—	—	Not Used
A12	D-GN	19	Right Rear Stop/Turn Lamp Supply Voltage
B1	TN	694	Driver Door Lock Actuator Unlock Control
B2	—	—	Not Used
B3	RD/WH	1240	Battery Positive Voltage
	RD/WH	1240	Battery Positive Voltage
B4	—	—	Not Used
B5	BN	4	Accessory Voltage
	BN	4	Accessory Voltage (L61/LE5)
B6-B7	—	—	Not Available
B8-B11	—	—	Not Used
B12	GY	8	Instrument Panel Lamp Supply Voltage (LSJ) and (J41)
B12	GY	8	Instrument Panel Lamp Supply Voltage (L61/LE5)
	GY	8	

Pin	Wire Color	Circuit No.	Function
			Instrument Panel Lamp Supply Voltage (L61/LE5)
C1-C2	—	—	Not Available
C3	D-GN	1301	Retained Accessory Power Fuse Supply Voltage
C4	—	—	Not Used
C5	D-GN	801	Retained Accessory Power Fuse Supply Voltage
C6-C7	—	—	Not Available
C8-C11	—	—	Not Used
C12	OG	228	Windshield Washer Pump Control
D1	RD/BK	142	Battery Positive Voltage
D2	—	—	Not Available
D3	—	—	Not Used
D4	RD/WH	840	Battery Positive Voltage
D5	D-GN	801	Retained Accessory Power Fuse Supply Voltage
D6	PK	739	Ignition 1 Voltage
D7	PK	1339	Ignition 1 Voltage
	PK	1339	Ignition 1 Voltage
D8-D9	—	—	Not Used
D10	RD/BK	442	Battery Positive Voltage
D11	—	—	Not Used
D12	RD/WH	242	Battery Positive Voltage